



# USE AND CARE GUIDE

## ALL REFRIGERATOR MODEL: ARD101/ARD161

### READ THIS INFORMATION

It will tell you how to operate and care for your refrigerator. It also offers tips on how to get the best performance.

#### IMPORTANT WARNINGS

An empty refrigerator is a very dangerous attraction to children. Remove the gasket, latches, lids or doors from unused appliances, or take some other action that will guarantee the appliance is harmless.

- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator:
  - Take off the doors.
  - Leave the shelves in place so that children may not easily climb inside.
  - Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.

For parts or service information, call Absocold: (800) 843-3714 or (765) 935-7501

Model # \_\_\_\_\_ Serial # \_\_\_\_\_

Record in the space provided above the serial number and model number of this appliance.

They are located on the serial plate affixed to the backside of the refrigerator or inside the refrigerator affixed to the inner liner surface.

### TWO YEAR FULL WARRANTY

Absocold guarantees to the original purchaser that this appliance will be free from defects in material and workmanship for a period of two years from the date of purchase, when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

During the above warranty period, Absocold and its authorized dealers or its representatives retain the option to repair or replace the product, free of charge, if installation is within the fifty (50) states and the District of Columbia. If installation is outside the fifty (50) states, the cost of installation is borne by the purchaser, and Absocold's warranty obligations hereunder shall be limited to furnishing all replacement parts and materials, freight prepaid, to the continental United States port designated by the purchaser.

In an effort to properly administer its warranty policy, Absocold or its representatives may require a proof-of-purchase document before authorizing service or repair to the appliance under this warranty.

Warranty service information is available by simply contacting Absocold at 1 (800) 843-3714 or by contacting the dealer from whom you purchased this product.

It shall be the responsibility of the purchaser to deliver any compact refrigerator or freezer of less than 4.0 cubic feet in capacity to the nearest authorized service station, as designated by Absocold or its representatives, to obtain service under this warranty.

Except as provided herein, Absocold makes no other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose.

This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Indoff, LLC  
11816 Lackland Rd  
St. Louis, MO 63146

## WHEN YOUR REFRIGERATOR IS INSTALLED

### INSPECT

Inspect for shipping damage. If unit is damaged or parts are missing, notify your Absocold dealer at once.

### INSTALLATION REQUIREMENTS

This refrigerator is intended to be used in household and similar applications such as hotels, motels and other residential type environments. Remove all packing material and tape. Install on a level floor or well-supported counter. Avoid any direct sunlight, heat source, or moisture. This refrigerator is designed to be freestanding – that is, the appliance is to be installed at least 2" from the wall and the cabinet bottom is at least ¾" to 1" above the floor or carpet, in order to let the air circulate freely around the refrigerator. Also allow at least 2" of space on the sides and 2" on the top surface as well.

When installing the unit in a closed cabinet environment, proper cabinet cut outs are required for proper ventilation.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

### ELECTRICAL REQUIREMENTS

115 volts, 60 Hz, 15 amps.

### ELECTRICAL GROUNDING

(for 115-volt models only)

Must be grounded. Uses 110-115 volts, 60 Hz.

(60 cycles A.C.) Do not use extension cord or ungrounded (two prong) adapters. Use three-prong plug, with three-prong grounded wall outlet.

Unless the above grounding method is followed, you are not protected against severe or lethal shock, in the event of a short circuit of an electrical component or wiring of refrigerator.

In the event the power supply cord is damaged, it must be replaced by a service agent or a similarly qualified person to avoid a potential hazard.

### CAUTION

Should you unplug refrigerator, allow at least three (3) minutes before restarting in order to allow the start relay to function properly

### USE AND CARE INFORMATION

#### • TIPS ON EVERYDAY USE AND CARE

**TO CONTROL TEMPERATURE:** Normally the Temperature Control Knob should be set at medium position. The refrigerator temperature can be adjusted colder or warmer by turning the Temperature Control Knob. Colder temperature can be achieved by turning the Control Knob clockwise towards the *MAX/larger dots* position. Warmer temperature can be selected by turning the Control Knob counterclockwise towards the *MIN/smaller dots* position. To turn off the refrigerator turn the Control Knob counterclockwise until you reach 0 or *off*.

Set the Temperature Control Knob to *MAX* only when the rapid refrigeration is necessary. Be sure to set it back to the middle later on. Do not operate the refrigerator for more than six hours at a stretch with the Temperature Control Knob set to *MAX*.

**DEFROST:** As long as temperature control is set at ordinary position, evaporator is automatically defrosted. Defrosted water is drained out to evaporating tray on the back of the refrigerator and is evaporated automatically. For the most efficient operation of your refrigerator, defrost it whenever a ¼" thick layer of ice frost forms (except for frost-free models). When defrosting, turn off control. Remove all food from the refrigerator. **WARNING:** Do not use mechanical devices to speed defrosting. Do not scrape or use sharp objects. Let frost melt. Pan of warm water in refrigerator speeds defrosting. Empty defrost tray. Reset cold control. Replace food.

**FOR ALL CLEANING:** Mix 2 tablespoons of baking soda or mild soap with 1-quart of warm water. No strong cleaners, scouring power or pads should be used. For persistent odors, Absocold's Services Department has odor removal products. Vacuum the tubing on outside back when dusty.

#### • THINGS TO REMEMBER

1. Allow 24 hours for your refrigerator to reach a new temperature setting.
2. The motor will start and stop often. It must do so in order to maintain the temperature you select.
3. Keep your refrigerator reasonably level
4. Unplug refrigerator before doing anything with its electrical system
5. Avoid damaging the refrigerant tubing while using, handling, or moving your refrigerator

#### • BEFORE CALLING FOR SERVICE

Check plug and outlet. Test outlet with lamp or another device. Be sure control is on. Read all Use & Care Information. Your questions may be answered. If not, find your model number (on upper back of refrigerator or inside the refrigerator affixed to the inner liner surface on the right-hand side). Refer your model number and the problem to Absocold at (800) 843-3714 or (765) 935-7501. All service parts replacements must be done by a service agent or similarly qualified person to minimize the risk of possible ignition due to incorrect parts or improper service.

#### ENERGY SAVING TIPS - WAYS TO SAVE POWER, SAVE MONEY, AND STILL ENJOY YOUR REFRIGERATOR

- Reduce door openings
- Close the door as soon as you can.
- Don't put hot food in refrigerator
- Adjust temperature control to medium setting when practical
- Keep your refrigerator away from stoves and other heat sources

### WARNING

- Your refrigerator should be connected directly to a grounded electrical wall outlet. No extension cords, multi-connection bars, etc. should be used.
- In case of prolonged power outage or an electrical disconnect of any type, please check your refrigerator for spoiled food.